


This sheet provides important operation and maintenance information to promote safe and consistent service.


IMPORTANT: When moving an XL Micro carriage, always fold out and lock the handle into place first.

- 1 Release the handle clip by pressing on either side of it and fold out the handle.
- 2 As the handle nears its full extension, lift and retract the small, sprung locking pin.
- 3 With the pin retracted, push the handle down into place and then release the pin.
- 4 Ensure that the handle is locked into place.

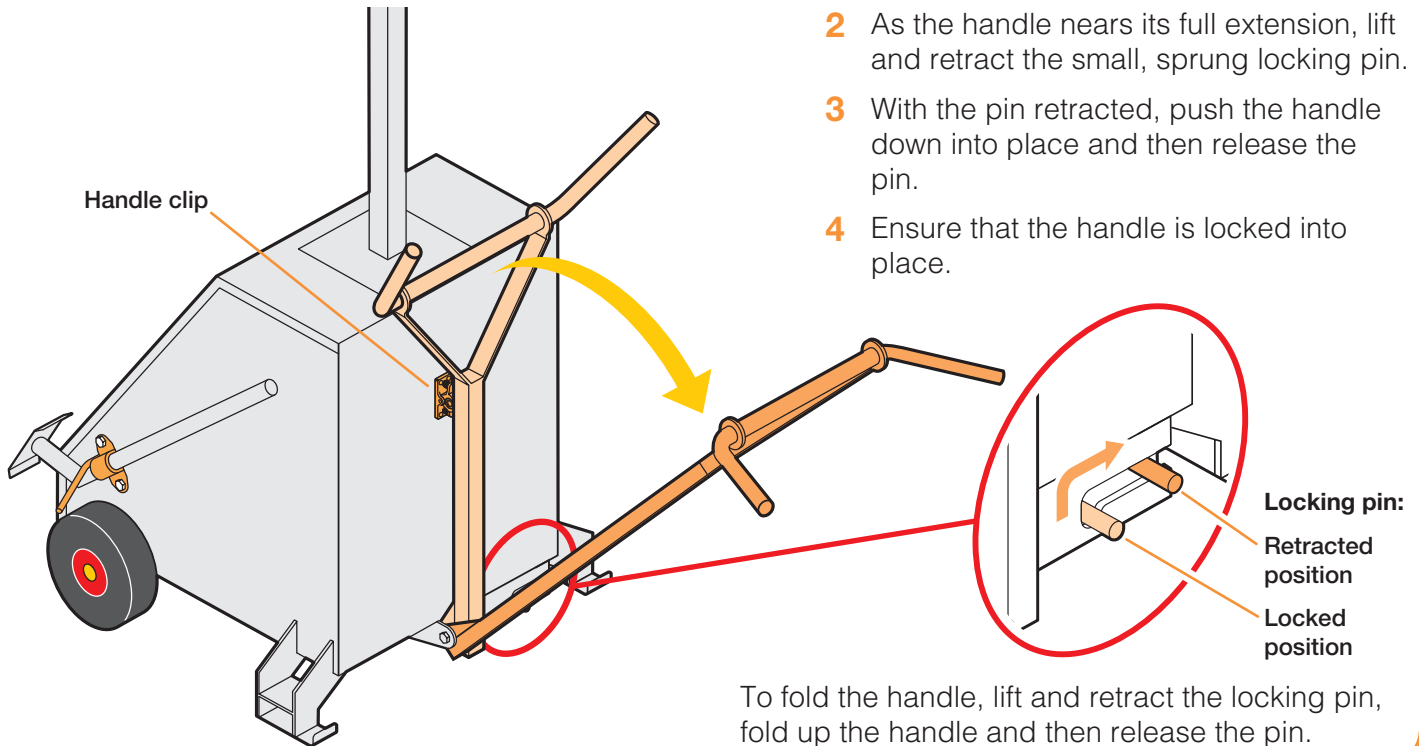


Stabiliser legs

- When the XL Micro is in position, lower the two stabiliser legs to the ground and secure their clamps.

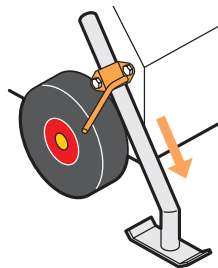

- After use, raise and secure both stabiliser legs before moving the XL Micro unit.

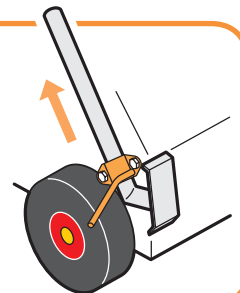

Routine maintenance

Prior to use, please make the following checks:

- On each carriage, check that the handle pivots are clean and that each handle moves with ease.
- On each carriage, check that the locking pin channel and its return spring are clean and that each locking pin moves with ease. If a locking pin does not return to its locked position then the spring may need to be replaced.
- On the trailer, in addition to the standard road-worthiness checks, ensure that the lynch pins (which hold each XL Micro carriage in place) are clean and can be moved with ease.
- On each carriage, check that the wheels are in good condition and show no signs of cracking or excessive wear.

Remedies

- 1 If necessary, clean off any contaminants using a suitable method.
- 2 Apply a silicon-based lubricant spray to the movable part.

IMPORTANT: Do not use grease on any areas as this will attract further contamination.


Replace any carriage wheels that show signs of wear or damage.

IMPORTANT: If any damage is discovered, do not use the unit until the problem is fully remedied.

Secure the trailer before loading or unloading



- Place the trailer on level ground and ensure that it cannot move.
- Before using the ramp, lower both prop stands and the jockey wheel to the ground and secure.
- Ensure that all clamps and cotter pins are in good condition, including their sprung retaining clips. Replace any worn items.

Ensure the jockey wheel is correctly adjusted and both prop stands are lowered to the ground

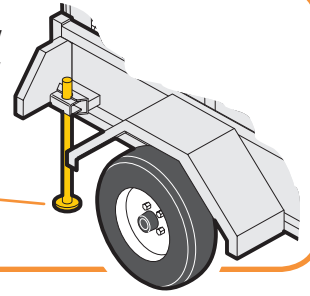

Unloading from the trailer

- 1 With the trailer secured as discussed above, carefully lower the ramp.
- 2 Remove the cotter pins that secure the neck clamps for the two XL Micro carriages at the rear of the trailer.
- 3 Fold out and lock the handles of the rear XL Micro carriages (as discussed overleaf) and carefully unload them down the ramp.
- 4 Remove the two cotter pins that secure the rear transit bar and carefully remove the bar from the trailer.
- 5 Repeat steps 2 and 3 for the two front XL Micro carriages.

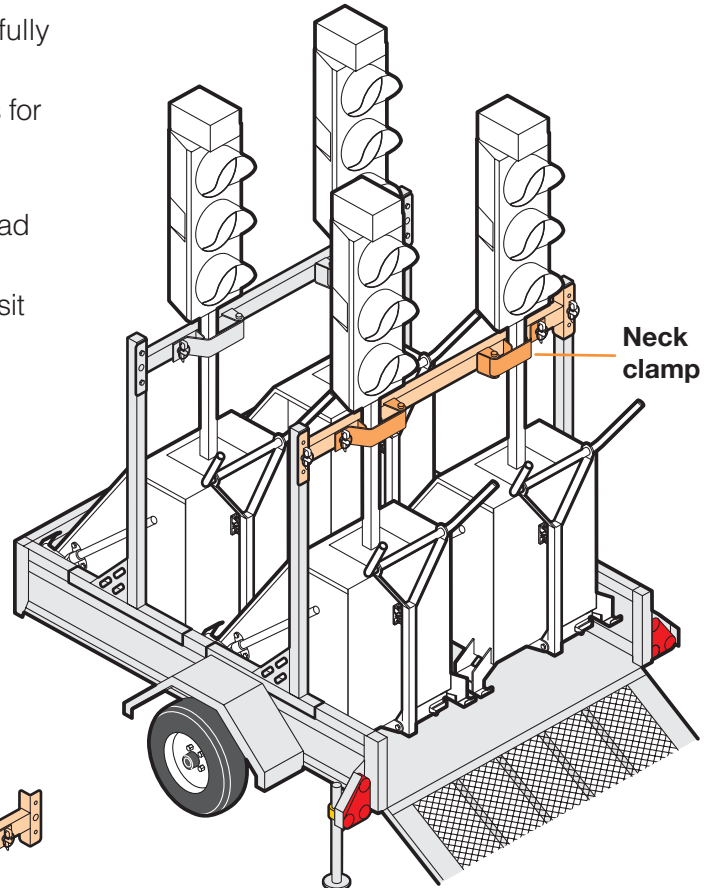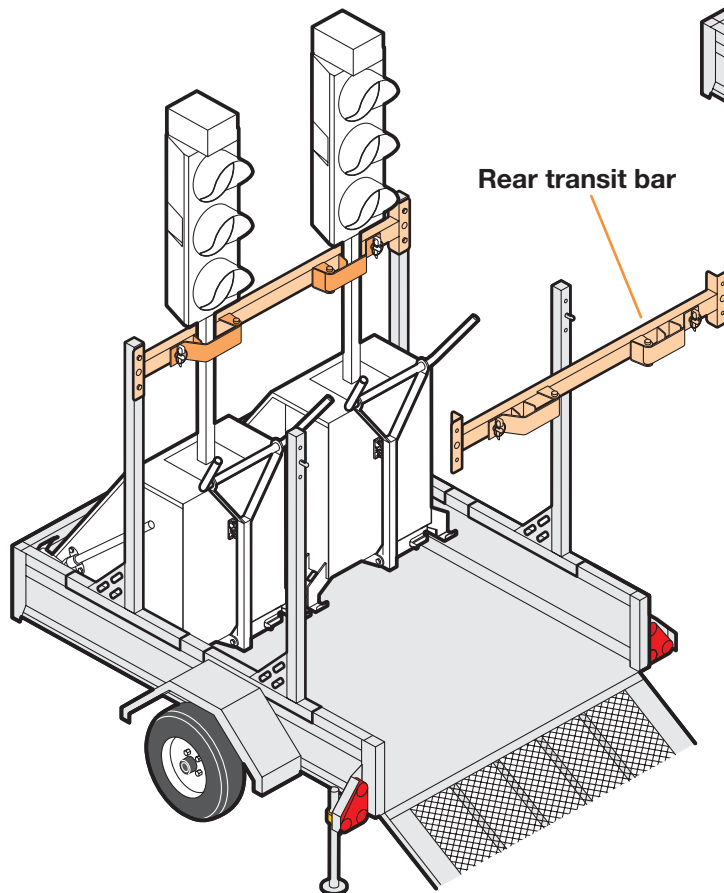

Loading onto the trailer

- 1 With the trailer secured as discussed above, carefully lower the ramp and remove the rear transit bar (if fitted).
- 2 Fold out and lock the handles of the first two XL Micro carriages (as discussed overleaf) and push them up the ramp into the front two positions on the trailer.
- 3 Engage the front two neck clamps and secure them with their cotter pins.
- 4 Replace the rear transit bar and secure it with its two cotter pins.
- 5 Repeat steps 2 and 3 for the two rear XL Micro carriages. Raise and secure the ramp.
- ! Double check all clamps and cotter pins before towing.